For spare parts refer to back of page.

This copy may be copied for maintenance of Richter play equipment. Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check that all bolts and screws are tight and Any equipment with moving parts must retighten if necessary. be checked at least twice a year, static equipment at least once a year. Swing suspension Intervals for maintenance work and checks generally depend on Make sure that the joints move smoothly. 4. Make sure that the swivels move smoothly, - location apply grease if required. - kind of use - frequency of use 5. Check welds of metal cross beam for cracks. - possible vandalism 6. Check chain and connection to chain; For more details see also "General the first chain link must be locked firmly in instructions for maintenance of the swivel; check wear on contact surfaces playgrounds". between first and second chain link. **High Double Swing special** Swing seats as attachment to towers Order No. 3.19042 7. Replace if metal parts are exposed. Check the seats for a ground clearance of 40 cm. Structural stability 9. In order to check the steel feet for corrosion, uncover the foundations once a year. Special notes, e.g. for repairs Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action All work carried out, everything is in order Maintenance carried out by:

Spare Parts
Double High Swing
special
Order No. 3.19042



Please note that the safety standards of the equipment must not be affected. Therefore, when carrying out repairs it is helpful to **only use original parts**.

○ Tuel No. 3.13042			
Order No.	Spare part	Order No.	Spare part
0.93000	rubber swing seat	0.93090	U-shackle with swivel
0.93010	rubber swing seat with 4 eyebolts	0.88150	brass bush for swing joint
0.93020	rubber swing seat with 2 V-chains	0.20010	stainless steel machine bolt M8x55 with locking nut
0.93021	V-chain	0.20020	stainless steel machine bolt M8x28 with locking nut
0.93120	rubber swing seat with chains		
0.93100	chains (pair) 6 mm length 2.35 m		
E STATISTICA	**************************************		