Instructions for wear checks of play equip

Playground

Date of installation

Checks depend on the type of equip Any equipment with moving parts me be checked at least twice a year, sta equipment at least once a year.

Intervals for maintenance work and generally depend on

 
- location
- kind of use
- frequency of use
- possible vandalism

For more details see also "Genera instructions for maintenance of playgrounds".

Double Hanging Rope for attachment to platform Order No. L3.68510

4

detailed diagram



For spare parts refer to back of page.

Richter play equipment.				
ment	The equipment must be checked for correct operation and safety, especially the points listed below:		Proof of maintenance	
		Wooden parts		
	1.	Check for rot and, if necessary, smooth out splinters and round off sharp edges of cracks.		
oment. ust atic	2.	Recommendation : apply paraffin wax to the upper end grain areas once a year, please refer to Order No. 0.90100, 1 litre.		
checks		Rope connections		
	3.	Check that bolts and screws are tight and retighten if necessary (see detailed diagram).		
	4.	Check ropes for wear and tear, if the steel reinforcement is damaged it is imperative it be replaced.		
al		Structural stability		
	5.	In order to check for rot at wooden parts or steel feet for corrosion, uncover the foundation once a year.		
				Special notes, e.g. for repairs
				Spe

En-EN 04.10.2022

Repair not carried out,

Repair not carried out,

All work carried out, everything is in order

it is still possible to play on equipment

..... Date

equipment is taken out of action

Maintenance carried out by:

