Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Wooden parts Playground 1. Check for rot and, if necessary, smooth out Date of installation splinters and round off sharp edges of cracks. Checks depend on the type of equipment. Check that the beam is fastened properly Any equipment with moving parts must to the platform, retighten bolts and screws if be checked at least twice a year, static necessary. equipment at least once a year. Climbing net Intervals for maintenance work and checks generally depend on 3. Check that connection points are tight and retighten if necessary (see detailed diagram). - location - kind of use 4. Check the net for wear and tear, if the steel - frequency of use reinforcement is damaged it is imperative it - possible vandalism be replaced. For more details see also "General 5. If necessary re-tension the net at the bottom instructions for maintenance of playgrounds". Structural stability **Inclined Climbing Net** as attachment to platforms Uncover the foundation once a year and Order No. Height check the connection (tensioning hook) to the 1.50 m anchoring chain. 3.69110 3.69115 1.50 m 3.69140 1.00 m 3.69160 1.50 m 3.69180 2.00 m Special notes, e.g. for repairs Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action Detail All work carried out, everything is in order Maintenance carried out by: Date