## Instructions for wear The equipment must be checked for Proof of correct operation and safety, especially maintenance checks of play equipment the points listed below: Check the stability of the masts and check that Playground ..... jets and rotors are securely connected (twice per year). Date of installation ..... To avoid jets and rotors becoming deformed and Checks depend on the type of equipment. damaged always handle them by the hexagonal Any equipment with moving parts must nuts and flattenings provided and use suitable be checked at least twice a year, static spanners. equipment at least once a year. The water-lubricated rotor bearings are made of Intervals for maintenance work and checks plastic. generally depend on If clogged, jets and rotors can be removed and - location cleaned. - kind of use - frequency of use The connections come equipped with flat - possible vandalism gaskets. For more details see also "General Usually, the connectors are located at a height of instructions for maintenance of about 4 m so that a big double ladder is needed playgrounds". for access. **Forest Fountain** Prior to the period of frost, it is imperative the Masts made of wood or made of pipes in the masts as well as the supply lines be stainless steel with Jets and Rotors drained. This is usually done by opening the tube Order No. 5.27031 - 5.27037 wood fitting in the pump chamber. Order No. 5.27531 - 5.27537 steel example High Collision Disc Special notes, e.g. for repairs Repair not carried out, it is still possible to play on equipment Repair not carried out, equipment is taken out of action All work carried out, everything is in order Maintenance carried out by: ..... Date ......