This copy may be copied for maintenance of Richter play equipment!

Instructions for wear checks of play equipment

Playground: .....

Date of installation: .....

Checks depend on the kind of equipment. Any equipment with moving parts must be checked at least twice a year, static equipment at least once a year.

Intervals for maintenance work and checks generally depend on:

- location
- kind of use
- frequency of use
- possible vandalism

For more details see also "General instructions for maintenance of playgrounds"

Big Bird Platform
Order no. 8.83300

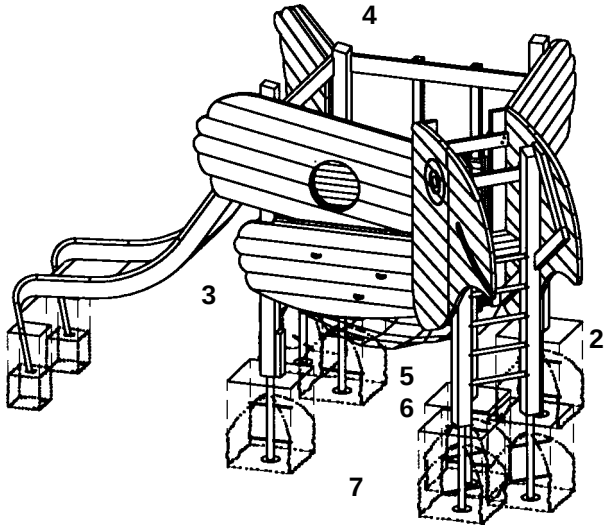

The equipment must be checked for correct operation and safety, especially the points listed below:		Proof of maintenance 1.	2.	3. etc.
BASE EQUIPMENT Platform				
Wooden parts				
1	Check for dry rot and smooth out splinters	☐	☐	☐
2	Check the ash rungs of the ladder for wear, the remaining diameter must be at least 30 mm	☐	☐	☐
3	Check all the screw and bolt connections for firmness, tighten if necessary	☐	☐	☐
4	**Recommendation:** Apply paraffin wax to the end grain faces of the laminated wood plates once a year	☐	☐	☐
Ropes				
5	Check the connection of the Ropes for firmness	☐	☐	☐
6	Renew the Ropes if the steel core is exposed	☐	☐	☐
Structural stability				
7	Dig out the foundations once a year and check for stability and corrosion	☐	☐	☐
ATTACHED EUQUIPMENT (Separate maintenance instructions)	Please pay particular attention to the maintenance instructions of the following attached euquipment: Slide Order no. 3.63320 Attention! Please check the documentation for completeness.	Special notes (e. g. for repairs):	Special notes (e. g. for repairs):	Special notes (e. g. for repairs): .....
Repair not carried out, it is still possible to play on the equipment		☐	☐	☐
Repair not carried out, equipment is taken out of action		☐	☐	☐
All work carried out, everything is in order		☐	☐	☐
Maintenance carried out by		.....	.....	.....
Date		.....	.....	.....

Copyright © Richter Spielgeräte GmbH * 83112 Frasdorf * Germany En-EN 17.07.2007